



MASTER

EMPTY PLASTIC CONTAINERS UNSCRAMBLER



MASTER is the most efficient range of POSIMAT unscramblers, they are easy to handle and **require virtually no maintenance.**

Designed specifically for bottlers that work at medium or low speeds and require **reliable operation and easy handling.**



Equipment description

The bottles enter the unit through an opening in the upper lid (1). They are distributed to the rotating disc in such a way that they are moved into place in the selecting pieces, and from there they move down the funnels in the only available position: upright (2). This is achieved without any mechanical help, i.e., **using air and gravity alone.**



The funnel guides the bottles towards the machine exit, and once there, they are deposited on the exit conveyor. They can exit in two ways: air conveyor belt (3) for flat-base bottles, or in star-wheel with POSIJET air conveyor (4) for bottles with petaloid bases.



Monoblock construction (optional) **with a built-in infeed hopper** (5) for easy transport and assembly, which can be easily carried out by the user.



THERE ARE TWO DIFFERENT KIND OF CHANGEOVERS:

One set of formats (segments and funnels) for each bottle (6), which can be changed **without using tools.** For more details, see the "N" catalogue.



A single set of formats (7) for a wide range of bottles, which can be **adjusted manually.** For more details, see the "POSIFLEX-M" catalogue.

POSIMAT advantages

Protective outer machine frame (optional) for enhanced sound insulation and safety.

Simplicity of design and operation: it only has one moving part. It does not contain hooks, springs, straps, lifts, ramps or chains that must be replaced.

Smooth handling of all kinds of bottles.

Economical solution: quality and flexibility at a low cost.

Compact size.

POSIMAT HQ

Barcelona
+34 93 729 7616
sales@posimat.com

POSIMAT USA

Miami
+1 305 477 2029
miami@posimat.com

POSIMAT MEXICO

CDMX
+52 55 5135 3947
luis.perez@posimat.com

service and sales support worldwide

POSIMAT ASIA SERVICE

Kuala Lumpur
+60 112 1125246
service.asia@posimat.com

POSIMAT INDIA

Pune
+91 80558 51501
santosh.zope@posimat.com